

# Floor Damage Sensor

## Instructions



## How to use the Floor Damage Sensor.

The damage sensor has three wires with crocodile clips attached to the end, Red, Black and Green



1. This damage sensor needs to be firstly tested to ensure that the battery is ok, so without the device connected switch it on.
2. You will hear a high pitch beep if the device is working correctly. It only makes this noise under fault conditions.
3. Now switch it off.
4. Connect the crocodile clips to the end of the heating mat or cable that you are working on.
5. Red wire connects to the Brown wire
6. Black wire connects to the Blue wire
7. Green wire connects to the Green/Yellow wire
8. Once the wires are connected, switch the device on. You should not hear any noise.
9. You can now lay your heating elements safe in the knowledge that if you were to accidentally damage it a beep will sound and it will not too late to have the system repaired or replaced.

